

Tel: +86-133-9116-8218 www.permixtec.com Shanghai, 201807, China www.permix-mixing.com

PDI - High Speed Mixer

Introduction:



The PerMix PDI series High Speed Mixer, also called Mixer Granulator, Wet Granulator, or High Shear Mixer Granulator, is an efficient and versatile blending machine for mixing of dry powders, or granulating with the addition of liquid binder, within a very short time and with excellent cleaning abilities. It is able to give perfect result for mixing due to the innovative design of a central Impeller type mixer with a side vertical Chopper.

The proven mixing action of the PerMix PDI series High Speed Mixer ensures effective mixing in may applications. Optimal performance is assured with dedicated designs of optional feeding, discharging and installation.

Basic Construction:

The PerMix PDI series High Speed Mixer consists of two electrical motors, one reduction gear, coupling, and shafts with the two agitators. The shaft is sealed with special sealing, sometimes with air purge, in a way that there is limited contact between the material and the seal.

PerMix Tec Co., Ltd Room 1-1214, No.1888, Fax: +86-21-3375-8218 N. Shengxin Rd, Jiading,

Tel: +86-133-9116-8218 www.permixtec.com Shanghai, 201807, China www.permix-mixing.com

Materials are loaded from top side, and the discharge is located at the bottom side. Due to the consistent modular design, the system can be configured individually and easily adapted to the constructional circumstances and specific requirements.

How It Works:



In a PerMix PDI series High Speed Mixer, the powders are set in a multidimensional shear flow state and it needs only short mixing time until they are thoroughly mixed.

In case that granulation is required, the spraying system sprays the binder solution into the bowl to agglutinate with the materials and under the combined action of the impeller and chopper, uniform and porous granules are produced. After finishing the mixing or granulation process, powders/granules are discharged through the side discharge with no "dead zone" valve.

PerMix Tec Co., Ltd Tel: +86-133-9116-8218 Room 1-1214, No.1888, Fax: +86-21-3375-8218 N. Shengxin Rd, Jiading,

www.permixtec.com Shanghai, 201807, China www.permix-mixing.com

Features & Options:



- Impellers Design

Y-shaped rotor blade with special aerodynamic profile - this key element with the various product-optimized chopper designs are the result of many years of successful development.

- Construction Material & Finish

We are able to offer our PDI Mixers with contact part to be built in SS304, S316/316L, Titanium, Duplex stainless steel, Hastelloy, etc. Standard of internal and external finish can be adapted to the customer's needs. For abrasive materials we offer hardened Stainless Steel as the contact part.



- Feeding & Discharging

A variety of feeding & discharging methods can be selected by the customers.

PerMix Tec Co., Ltd Tel: +86-133-9116-8218 Room 1-1214, No.1888, Fax: +86-21-3375-8218 N. Shengxin Rd, Jiading,

www.permixtec.com Shanghai, 201807, China www.permix-mixing.com



- Drive System

Drive system by geared motor, cycloidal reducer, worm reducer, belt or chain transmission, etc.

- Spray Nozzle

Liquid can be added into the powder by spray nozzles on the top.



- Mixer Lid with Counter-weight or Pneumatic operated

Standard PerMix PDI Mixer is equipped with a cover with counter-weight, manually operated; however pneumatic opening is an option for easy opening and closing to save labors.

- Heating/Cooling Jacket

Jacketed trough for heating/cooling operation

- Vacuum Drying & Deaerating

The PDI mixer can be designed for vacuum drying & deaerating or for inner pressure working for

PerMix Tec Co., Ltd Tel: +86-133-9116-8218 Room 1-1214, No.1888, Fax: +86-21-3375-8218 N. Shengxin Rd, Jiading,

www.permixtec.com Shanghai, 201807, China www.permix-mixing.com

special applications.

Applications:

Some typical applications of a PerMix PDI series High Speed Mixer includes but not limited to:

- Food industry

Batters, Doughs for pastries, Flavours, Instant meals, Spice and herb mixtures, Sugar based confectionery tablets

- Chemical industry

Coloring of plastics, Master batches, Powder mixing with liquid addition, Powder paints

- Pharmaceutical industry

Granulate mixtures, Powder mixtures, Wet granulations

- Cosmetics industry

Ceramic dental mixtures, Eye shadows, Face powders

Specifications:

Model	Total Volume,	Operation	Impeller	Impeller	Chopper	Chopper
	[Liter]	Volume, [Liter]	Power, [kW]	Speed, [rpm]	Power, [kW]	Speed, [rpm]
PDI-10	10	6	2.2	381	1.1	1,500
PDI-50	50	30	4	288	1.1	1,500
PDI-100	100	60	5.5	277	1.5	1,500
PDI-200	200	120	7.5	193	3	1,500
PDI-300	300	180	11	176	4	1,500
PDI-400	400	240	15	176	5.5	1,500
PDI-600	600	360	22	149	5.5	1,500
PDI-800	800	480	30	124	7.5	1,500
PDI-1000	1,000	600	37	116	11	1,500
PDI-1500	1,500	900	55	99	18.5	1,500

^{1.} All specifications are as accurate as is reasonably possible, but they are not binding.

- 2. Customized sizes are available against request.
- 3. PerMix reserves the right to modify the design without notice.



PerMix Tec Co., Ltd Room 1-1214, No.1888, N. Shengxin Rd, Jiading,

Tel: +86-133-9116-8218 Fax: +86-21-3375-8218 www.permixtec.com Shanghai, 201807, China www.permix-mixing.com

Gallery:





PDI-600 Mixer Built in All Stainless Steel

PDI-600 with Special "Half Lid"







PDI-600 Cover Closed with Counterweight




PerMix Tec Co., Ltd Room 1-1214, No.1888, N. Shengxin Rd, Jiading, Shanghai, 201807, China Tel: +86-133-9116-8218 Fax: +86-21-3375-8218 www.permixtec.com www.permix-mixing.com



Lab-size PDI High Speed Mixer

High Speed Chopper of PDI Mixer

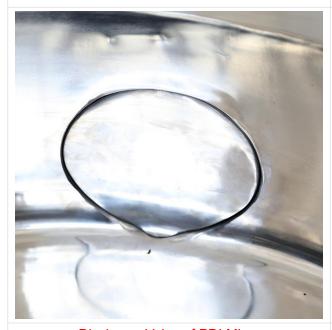





Access Door of the Discharging Housing