

PerMix Tec Co., Ltd Room 1-1214, No.1888, N. Shengxin Rd, Jiading,

Tel: +86-133-9116-8218 Fax: +86-21-3375-8218 www.permixtec.com Shanghai, 201807, China www.permix-mixing.com

PTS - Ploughshare Mixer

Introduction:



PerMix PTS series Ploughshare Mixer is one of our two types of Turbulent Mixer, which are originally designed by our Israeli engineers. The other one is PTP series Paddle Mixer.

PTS ploughshare mixer is so versatile that it can handle nearly all types of materials including dry powders, granular materials, short fibered substances, moist solids with liquids, pasty materials and highly viscous masses.

The PerMix PTS series Ploughshare Mixer can be used for numerous processing, including compounding, fine mixing, dispersing, suspending, emulsifying, deaerating, tempering, accelerating chemical or physical reactions, granulating, breaking down agglomerates, etc. It is particularly suited for such difficult processes as mixing trace elements in proportions of 1 in 100,000 to 1 in 1,000,000 parts.



PerMix Tec Co., Ltd Room 1-1214, No.1888, N. Shengxin Rd, Jiading,

Tel: +86-133-9116-8218 Fax: +86-21-3375-8218 www.permixtec.com Shanghai, 201807, China www.permix-mixing.com

Basic Construction:



PerMix PTS series Ploughshare Mixer consists of a centrally mounted horizontal shaft that rotates within a cylindrical container, plough shaped mixing elements that are attached to the centrally mounted shaft, special openings at the top for feeding materials, flush fitting access doors in the front of the mixer, a flush fitting discharge valve at the bottom of the mixer which is pneumatically or manually operated, and a complete drive unit.

Operaton Process:

The mixing drum of a Ploughshare Mixer is filled from 30% to 70% capacity, allowing space for individual particles to be dispersed within the main area of the mixer. The paddle-shaped mixing elements create intense axial and radial movement causing the product to move throughout the mixing area. The shape and angle, together with the adjustment and rotation of the mixing elements and the mixing drum, cause the product to be lifted off the surface of the drum wall. The product is automatically discharged while the machine is still running so that any segregation is prevented.



PerMix Tec Co., Ltd Room 1-1214, No.1888, Fax: +86-21-3375-8218 N. Shengxin Rd, Jiading,


Tel: +86-133-9116-8218 www.permixtec.com Shanghai, 201807, China www.permix-mixing.com

Lab & Pilot Models:



PerMix is able to offer lab & pilot size ploughshare mixers for Research & Development purpose. The small size machine is very helpful for customers when the ingredients for R&D are expensive, and to meet the budget limit at the first stage.

With the good performance of the lab & pilot mixer, it is easy to scale up for a medium size or even bigger one.

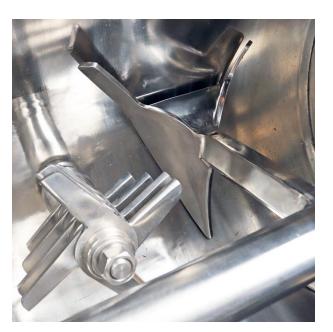


Special Design with Choppers:

The installation of PerMix Multi-chopper in the basic PTS mixer enables the breaking down of agglomerates during the mixing process. Together with the mixing element, the PerMix Multi-chopper removes lumps in the initial product, chops pasty adhesives and hinders the formation of



agglomeration during the moisturizing of powdered substances. The PerMix Multi-chopper is operated independently by its own motor.

Optional Features:

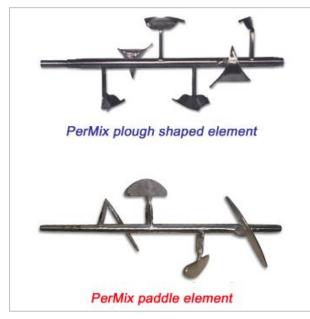

- Various types of mixing element

PerMix provides mainly two types of mixing elements – plough (for PTS Mixer) and paddle (for PTP Mixer). Both have their advantages: the plough shaped element can easily penetrate through the dense and thick powder or paste materials, while the paddle element can cover an even wider range of viscosity.



- Continuous operation

We can supply machines for continuous work when a large capacity per hour is needed for the same material. Continuous paddle mixers differ from batch paddle mixers in that the mass flow of the product is from the inlet of the container to the discharge at the opposite end.



Room 1-1214, No.1888, Fax: +86-21-3375-8218 N. Shengxin Rd, Jiading,

PerMix Tec Co., Ltd Tel: +86-133-9116-8218 www.permixtec.com Shanghai, 201807, China www.permix-mixing.com

- Heating/Cooling jacket

Jacketed trough for heating/cooling operation by steam, thermal oil, or water.



- Drive system

Drive system by geared motor, cycloidal reducer, worm reducer, belt or chain transmission, etc.



- Feeding & Discharging

A variety of feeding & discharging methods can be selected by the customers. Discharging port can be by manual or pneumatic operation.

- Access door

Access doors can be designed for easy inspection & maintenance.

- Spray nozzle



Liquid can be added into the powder by spray nozzles on a pipe which is installed on the top of the mixing trough. The necessary pump and tank can also be provided by us.



- Extended height bases

Height of our mixers can be defined according to customer's condition.

- Construction material

We are able to offer mixers with contact part to be built by Carbon steel, SS304, SS316/316L, Titanium, Duplex stainless steel, Hastelloy, etc. For abrasive materials we offer hardened steel as the contact part. Also we produce mixers all by stainless steel in order to meet the high hygienic requirement.

- Vacuum drying & deaerating

The mixer can be designed for vacuum drying & deaerating for special applications.

Applications:

PerMix PTS series Ploughshare Mixer has a wide range of applications:

- Dry powder mixing: Food flavoring/additives, Sponge/cake mixes, Cosmetics, Pharmaceuticals, Cement, Powdered rubber
- Paste mixing: Biscuit creams, dough, PVC pastes, Car body fillers/putties, Sugar/marzipan paste, Toiletry pastes, Tile adhesives and grouts
- Mixing of wet slurries: Filter cake re-slurrying, dough, Fiber glass resin dough putty
- Wet granulation •
- Liquid coating of powders and granules
- Fat and oil incorporation
- Vacuum drying
- Hot air drying



www.permixtec.com Shanghai, 201807, China www.permix-mixing.com

Specifications:

Model	Total capacity (liter)	Working capacity (liter)	Power (*) (kW)	Speed (rpm)	L1 (mm)	L (mm)	W (mm)	H1 (**) (mm)	H (***) (mm)
PTS-5L	5	3	1.1	0-582	180	800	500	-	-
PTS-10L	10	7	1.1	0-582	200	900	500	-	-
PTS-45	45	30	1.5	188	480	900	550	450	950
PTS-70	70	45	2.2	190	580	1,050	600	450	970
PTS-100	100	70	3	170	660	1,100	610	450	1,020
PTS-200	200	140	5.5	149	890	1,400	730	500	1,180
PTS-300	300	210	7.5	146	970	1,550	850	500	1,300
PTS-500	500	350	11	131	1,250	2,000	950	500	1,400
PTS-750	750	500	15	131	1,500	2,250	1,100	600	1,600
PTS-1000	1,000	700	22	101	1,900	2,600	1,150	600	1,800
PTS-1500	1,500	1,000	30	97	2,110	3,200	1,200	600	2,000
PTS-2000	2,000	1,400	45	97	2,110	3,500	1,350	600	2,200
PTS-3000	3,000	2,100	55	80	3,000	4,100	1,500	800	2,400
PTS-4000	4,000	2,800	75	80	3,000	4,200	1,550	800	2,600
PTS-5000	5,000	3,500	75	69	3,000	4,300	1,620	800	2,800

1. PTS-L: laboratory size

2. (*) (**) (***): Changes are available according to the customer's request.

3. All specifications and illustrations are as accurate as is reasonably possible, but they are not binding.

4. PerMix reserves the right to modify the design without notice.



PerMix Tec Co., Ltd Room 1-1214, No.1888, N. Shengxin Rd, Jiading,

Tel: +86-133-9116-8218 Fax: +86-21-3375-8218 www.permixtec.com Shanghai, 201807, China www.permix-mixing.com

Gallery:





PerMix Tec Co., Ltd Room 1-1214, No.1888, N. Shengxin Rd, Jiading, Shanghai, 201807, China Tel: +86-133-9116-8218 Fax: +86-21-3375-8218 www.permixtec.com www.permix-mixing.com



Plough of PTS-5 Lab-size Mixer



High Speed Chopper of PTS Mixer



Internal View of PTS Mixer



Access Door of PTS Plow Mixer